ES EN DE

CE

DEKRA CERTIFICATION BGV C1



TE-071

TORRE ELEVADORA

TOWERLIFT

TRAVERSENLIFT

MANUAL DE INSTRUCCIONES

OPERATING INSTRUCTIONS USER MANUAL

BEDIENUNGSANLEITUNG

PROLIFTS S.L.

V.09.19

LIFTING TOWER TE-071

TORRE ELEVADORA TE-071

CE

CERTIFICATIONS / CERTIFICACIONES

BGV-C1

BGG-912

EC Conformity Declaration pursuant to the EC Machinery Directives 89/392/CE and 98/37/CE: Manual lifters

Find a copy of the certifications at the end of this booklet.

Puede ver una copia de las certificaciones al final del manual.

MADE IN SPAIN (EU)

Manufacturer - Fabricante


PRO LIFTS S.L.
C/ Ciudad de Barcelona Nº19
Pol.Ind. Fuente del Jarro
46988 Paterna (Valencia)
Tlf Export: +34 96 171 81 86
Tlf Nacional: 96 171 81 83
info@prolifts.es - www.prolifts.es

Este manual de usuario y catálogo anexo de piezas de repuesto es propiedad de PRO LIFTS S.L.
Queda prohibida su reproducción total o parcial por cualquier medio que la tecnología actual permita.
Deposito legal y copyright 2016. Todos los derechos reservados.

RECYCLABLE

TE-071



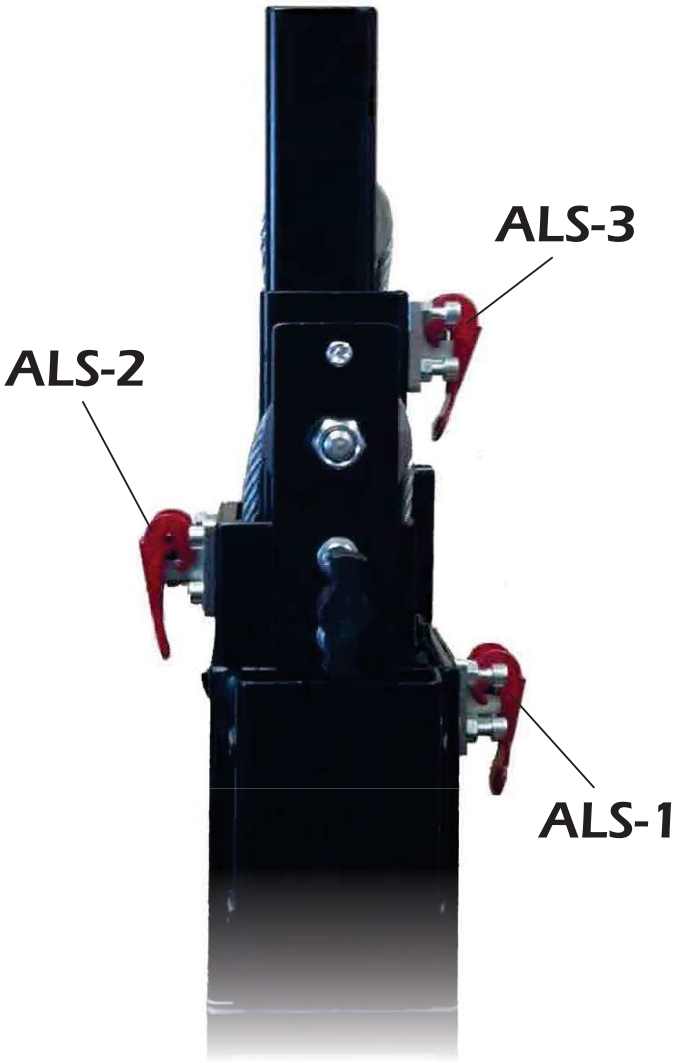



ALS.....Automatic security lock / Gatillo automático seguridad
A..... Red VMB knob / Palomilla presión roja VMB
S.....Transport compartment / Alojamiento de transporte
T.....Transport wheels / Ruedas de transporte
V.....Working compartment / Alojamiento de trabajo


Depósito legal y copyright. Todos los derechos reservados.

TE-071

H..... Handle / Manivela
L.....Spirit level / Nivel de burbuja
N..... Force on hand crank / Fuerza sobre manivela
P.....Leg / Pata
Q..... Stabilizer / Estabilizador
R..... Catch pawl / Gatillo bloqueo patas
S.....Transport compartment / Alojamiento de transporte
W.....Winch / Cabrestante

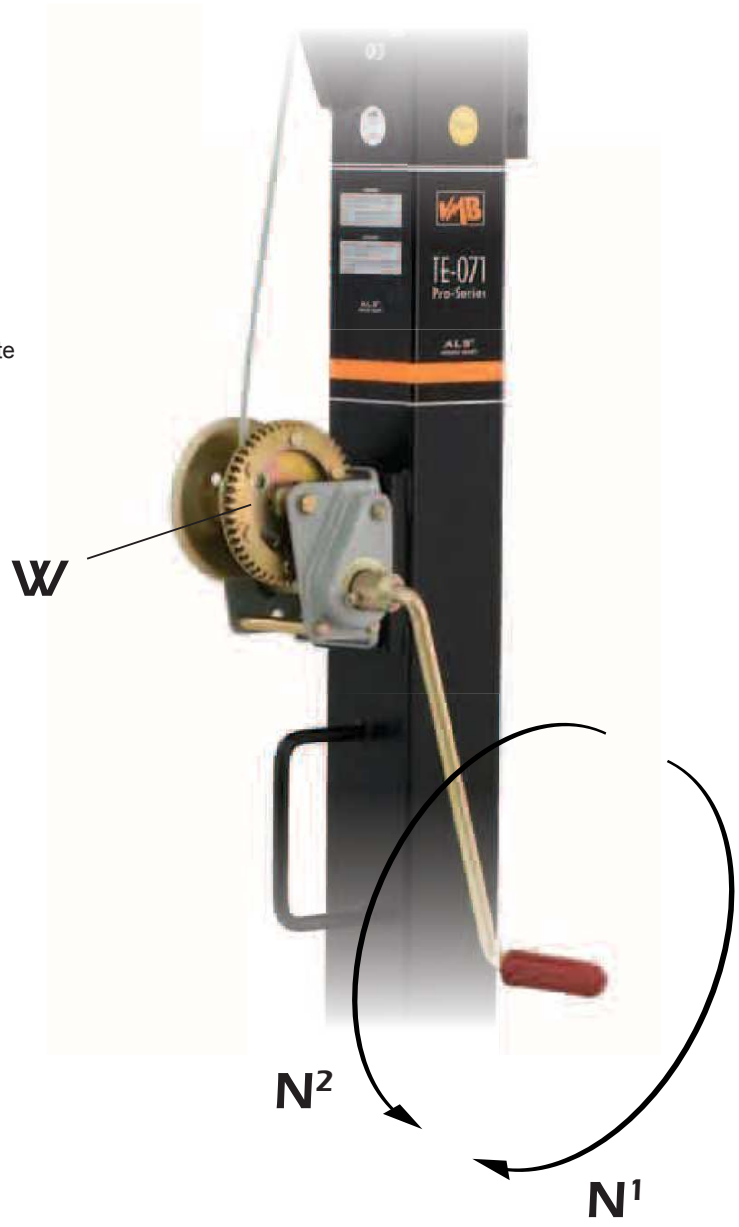

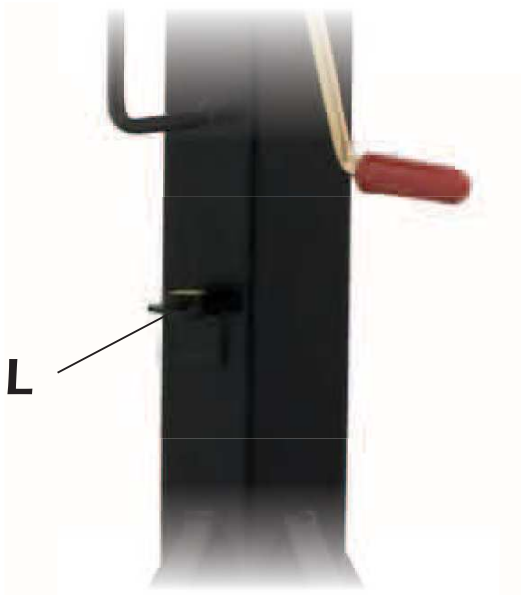

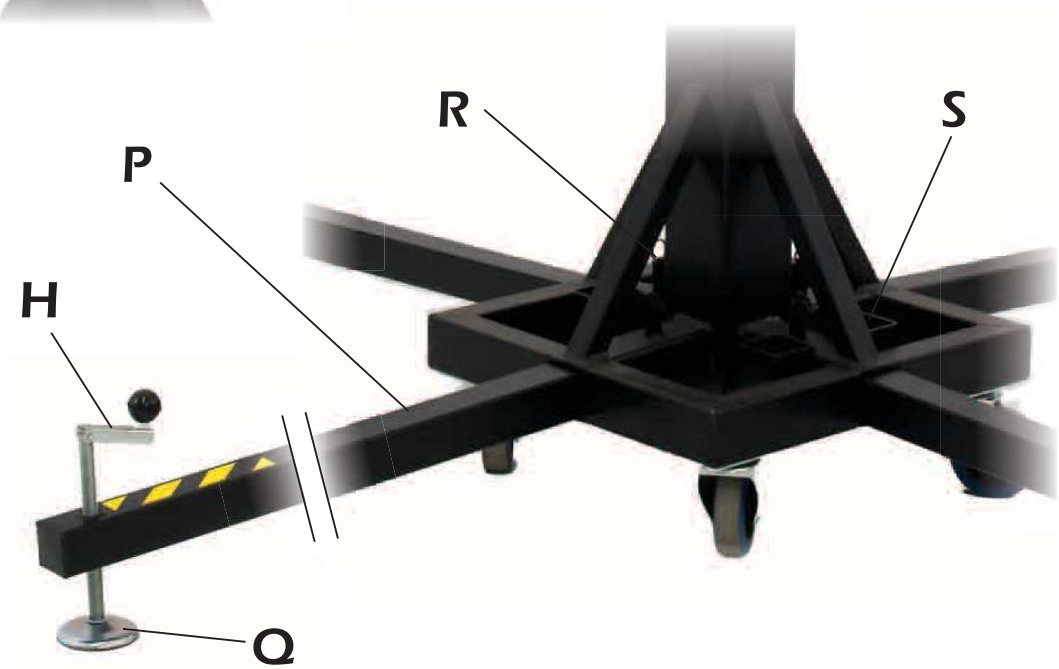

Depósito legal y copyright. Todos los derechos reservados.

CONTENTS

1. Introduction.
2. Technical information.
3. Safety precautions.
4. Operation.
5. Maintenance.
6. Guarantee.

1. INTRODUCTION

Dear customer,
In order to ensure a safe and reliable operation of the TE-071 towerlift please follow the instructions in this booklet carefully. Before operating the lift, read the instructions completely and please note the technical information contained within this manual.

All VMB products undergo very rigorous testing, under strict conditions and they are monitored continuously during the manufacturing process.
In order to guarantee the lifts function and safety, only original parts from the manufacturer must be used. If any parts other than those of the manufacturer are used, or the product is modified in any way, the user forfeits all warranty rights to claim. VMB reserves the right to modify the product specifications without prior notice.
The model type, production year and serial number must be quoted in any queries or orders for spare parts.

2. TECHNICAL INFORMATION

2.1 - TE-071 Towerlift.

2.2 - Designed to lift loads, such as trussing and lighting, vertically up to different heights.

2.3 - Maximum load : 220 Kg (485 lb).

2.4 - Minimum load : 25 Kg (55 lb).

2.5 - Maximum height : 5.35 m (17.5').

2.6 - Folded height : 1.73 m (5.7').

2.7 - Transport surface: 0.47x0.47x1.73m (1.54'x1.54'x5.7').

2.8 - Shipping dimension: 0.49x0.49x1.77m (1.61'x1.61'x.5.81').

2.9 - Work surface : 1,53 x 1,53m (5' x 5')

2.10 - Unit weight : 71 Kg (157 lb).

2.11 - Adaptator: Ø 35 mm (PSU-06/PSA-01).

2.12 - Construction material : Steel profiles DIN 2394.

2.13 - Four telescopic profile system operated by steel cable and guided by channelled steel pulleys with ball bearings.

2.14 - Winch: 450 Kg. maximum load with automatic brake. Certification CE and GS TÜV.

2.15 - Cable : Steel DIN 3060. Quality 180 Kg/mm^2 twist resistant.
Cable diameter : Ø6 mm.

2.16 - Exclusive ALS system (Auto-Lock

Depósito legal y copyright. Todos los derechos reservados.

Security), pat. pen. 200501056.hed in satin polyester.

2.17 - Adjustable stabilizing feet with ruber non-slip supports.

2.18 - Safety catches to anchor the legs.

2.19 - Antirust protection, primed paint with cured polyester dust cover. The tower can be supplied with natural aluminium finish or black (version B).


2.20 - Spirit level to adjust the tower vertically.

2.21 - Swivel wheels to transport the lift when folded.


3. SAFETY PRECAUTIONS.




3.1 - The TE-071 is a machine designed to elevate loads upwards in a vertical direction, It should NEVER be used as a platform to elevate people.

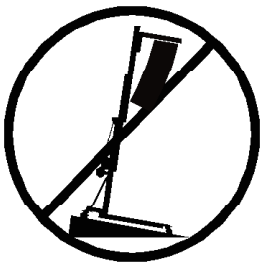

3.2 - Only place the lift on hard, flat surfaces always checking that it is in a vertical position by using the bubble level indicator (**L**) found on the base section. Adjust the leg stabilizers (**Q**) by turning the handles (**H**) to level if necessary. NEVER use wedges or other foreign objects to balance the lift.

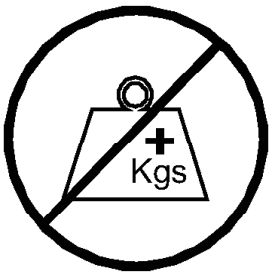


3.3 - The maximum load indicated on the characteristics label and the instructions manual should not be exceeded.

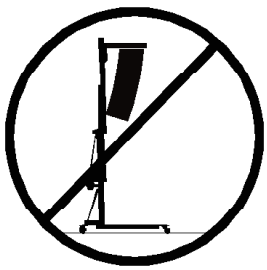

3.4 - This lift should NEVER be used to elevate a load that has not been properly checked. It is necessary to verify that the load is correctly supported and centred on the appropriate lift support so that the weight of the load will only elevate in a vertical direction.


Depósito legal y copyright. Todos los derechos reservados.

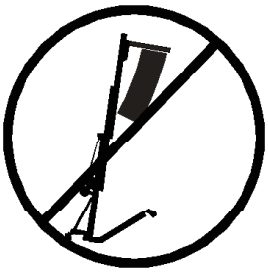


3.5 - Check that the legs (**P**) are placed and set-up correctly with their safety pins (**R**) inserted and locked.




3.6 - NEVER use the lift on a vehicle or any other mobile surface.

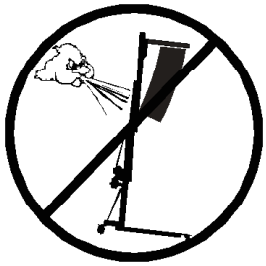


3.7 - If there is a possibility of strong winds or gusts, place the lift on the ground firmly and secure it with the use of straps. NEVER attach a strap to a vehicle or any other object that can possibly be moved.

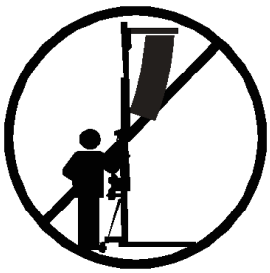

3.8 - NEVER move the lift whilst it is carrying a load. It is not advisable to carry out any type of horizontal movement even small positional adjustments.

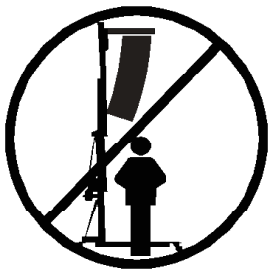

3.9 - NEVER allow any team member below the load or anybody else in the lifts operating zone.

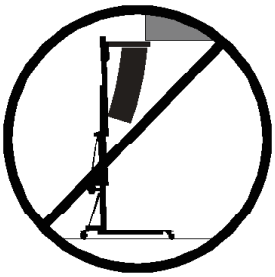


3.10 - Take care with all obstacles above the lift and its extension zone such as cornices, balconies, and luminous signboards. It is very important to avoid the presence of all types of cables below the extended lift.

Depósito legal y copyright. Todos los derechos reservados.




3.11 - Do not use stepladders on the lift or use it as a support for them.

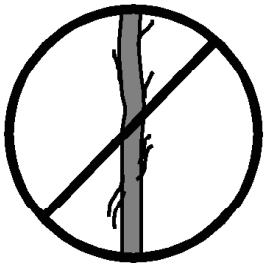


3.12 - Before using the lift, check the condition of the cable. The cable should not have broken threads or show any signs of crushed/flattened areas. NEVER use faulty cables, always change them if there is any doubt. Only use VMB steel cables; reference: DIN 3060. Quality: 180KG/mm and torsion resistant.




3.13 - All sections must be lowered first, and the legs placed in its transport position, before transportation.

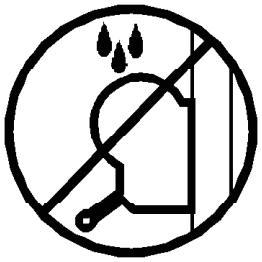

3.14 - Do not grease or lubricate the winch's braking mechanism. The brake disks have been greased with a special heat and pressure resistant solution. Other products should not be used to avoid negative effects regarding the braking mechanism.

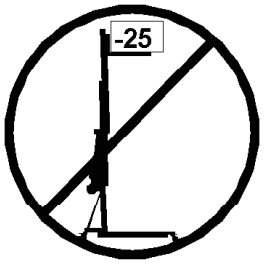

3.15 - The minimum load to avoid problems regarding the braking mechanism is 25Kg. Without this load the brake will not work.

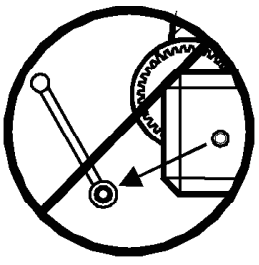

3.16 - NEVER take apart the crank of the winch when the lift is carrying a load or extended.

Depósito legal y copyright. Todos los derechos reservados.

ORIGINAL

3.17 - Only original replacement parts should be used.

4. USER INSTRUCTIONS.

4.1 - Place the lift on its working position, in a firm, flat surface with the help of the swivel wheels (**T**).

4.2 - Remove the legs from their transport supports (**S**) and fully insert them into their working positions (**V**) checking that they are fixed by the catches (**R**). Check that the lift is in vertical position using the spirit level (**L**) at the base profile, adjust the stabilizer (**Q**), turning the handle (**H**) if necesary.

4.3 - THE MAXIMUM LOAD IS 220 Kg (485 lb). The lift should NEVER be overloaded (over 220 Kg). Safety at work is the most important issue. Untighten the screw **(A**) and place the load onto the lift using an adequate support according to the need, use so that the weight of the load will only be elevated in a vertical direction. The minimum load is 25 Kg.

4.4 - Elevation: Turn the winch crank clockwise (**N**^{1}) to lift the tower, the red ALS lock enable the lift to rise and automatically block the profiles whilst rising, ensuring that the load will never fall.

4.5 - Blocking: Once the system is elevated to its required height, gently turn the handle in an anti-clockwise (**N**^{2}) direction to introduce the ALS locks in its corresponding hole and block the profiles. The ALS lock will take the pressure of the load and release strain applied on the cable.

Security system ALS

The TE-71 incorporates the patented security system ALS (Automatic Lock Security). This VMB red trigger system automatically blocks the tower in the position it is left in. Each section of lift has an ALS that blocks the section in the unlikely event of the cable breaking.

4.6 - Lowering: To bring the lift down you need to first turn the winch handle slightly clockwise (**N**^{1}) and at the same time pull the red **ALS-1** lock out. This releases the blocking systems. Then turn the handle anti-clockwise (**N**^{2}), whilst maintaining the **ALS-1** lock pulled out until the profile has been completely lowered. All red ALS locks should be pulled out one by one whilst the handle is turned anti-clockwise and the profiles are brought down, one by one.

CAUTION

When two towers are used to elevate a bridge, down truss or many towers to elevate a structure of any type, it is almost

Depósito legal y copyright. Todos los derechos reservados.

impossible that two or more people co-ordinate the winches elevating or lowering the loads, at exactly the same pace. At a certain point each tower will be extended to a height different to that of the others. **For this reason it is necessary that the structure does not stretch and allows for these differences.** With a rigid fixation and if the level difference is significant, the force generated from the handle of the winch will deform the structure and apply a lateral force to the lifts causing them to break and block.

4.7 - Transport:

For the transport of the tower is necessary to fold the machine lowering every profile completely. Once the towerlift is completely folded, place the legs in their transport compartment (**S**) and the lift is ready to be transported.

5. MAINTENANCE.

5.1 - Regularly check the state of the cable. If the cable has broken threads, or if it shows any signs of crushed/flattened areas, it should be changed and replaced immediately with a new one. Do not use the lift if the cables are in bad condition. Only use VMB steel cables reference: DIN 3060 torsion resistant.

5.2 - The lift is supplied from the factory completely greased. However, it is recommended to periodically grease according to use, the gearing, the axis bearings, the spiral of the crank, and the sections.

5.3 - All lifts should undergo an annual technical inspection carried out by an authorized VMB dealer to check the certifications and general condition of all the lift's elements and security systems involved in the lift's use.

5.4 - Only use original spare parts to guarantee a continued security level. The user loses all rights to warranty if any spare parts other than originals are used or carries out any modification or alteration to the towerlift.

5.5 - To request a spare part please indicate the corresponding code which can be found in this manual together with the lift's serial number and year of manufacture.

6. GUARANTEE.

The warranty period for this lift is 2 years from the date of purchase.


PRO LIFTS S.L. promises, that from the date of purchase and during the warranty period to resolve any faults that may occur, produced through defect material or fabrication. Damage caused by improper use, product modification, third party manipulation or accidental fire are not covered by this warranty.

Depósito legal y copyright. Todos los derechos reservados.


TE-071 SPARE PARTS SKETCHES /


CROQUIS DE LAS PIEZAS DE REPUESTO DE TE-071


Depósito legal y copyright. Todos los derechos reservados.

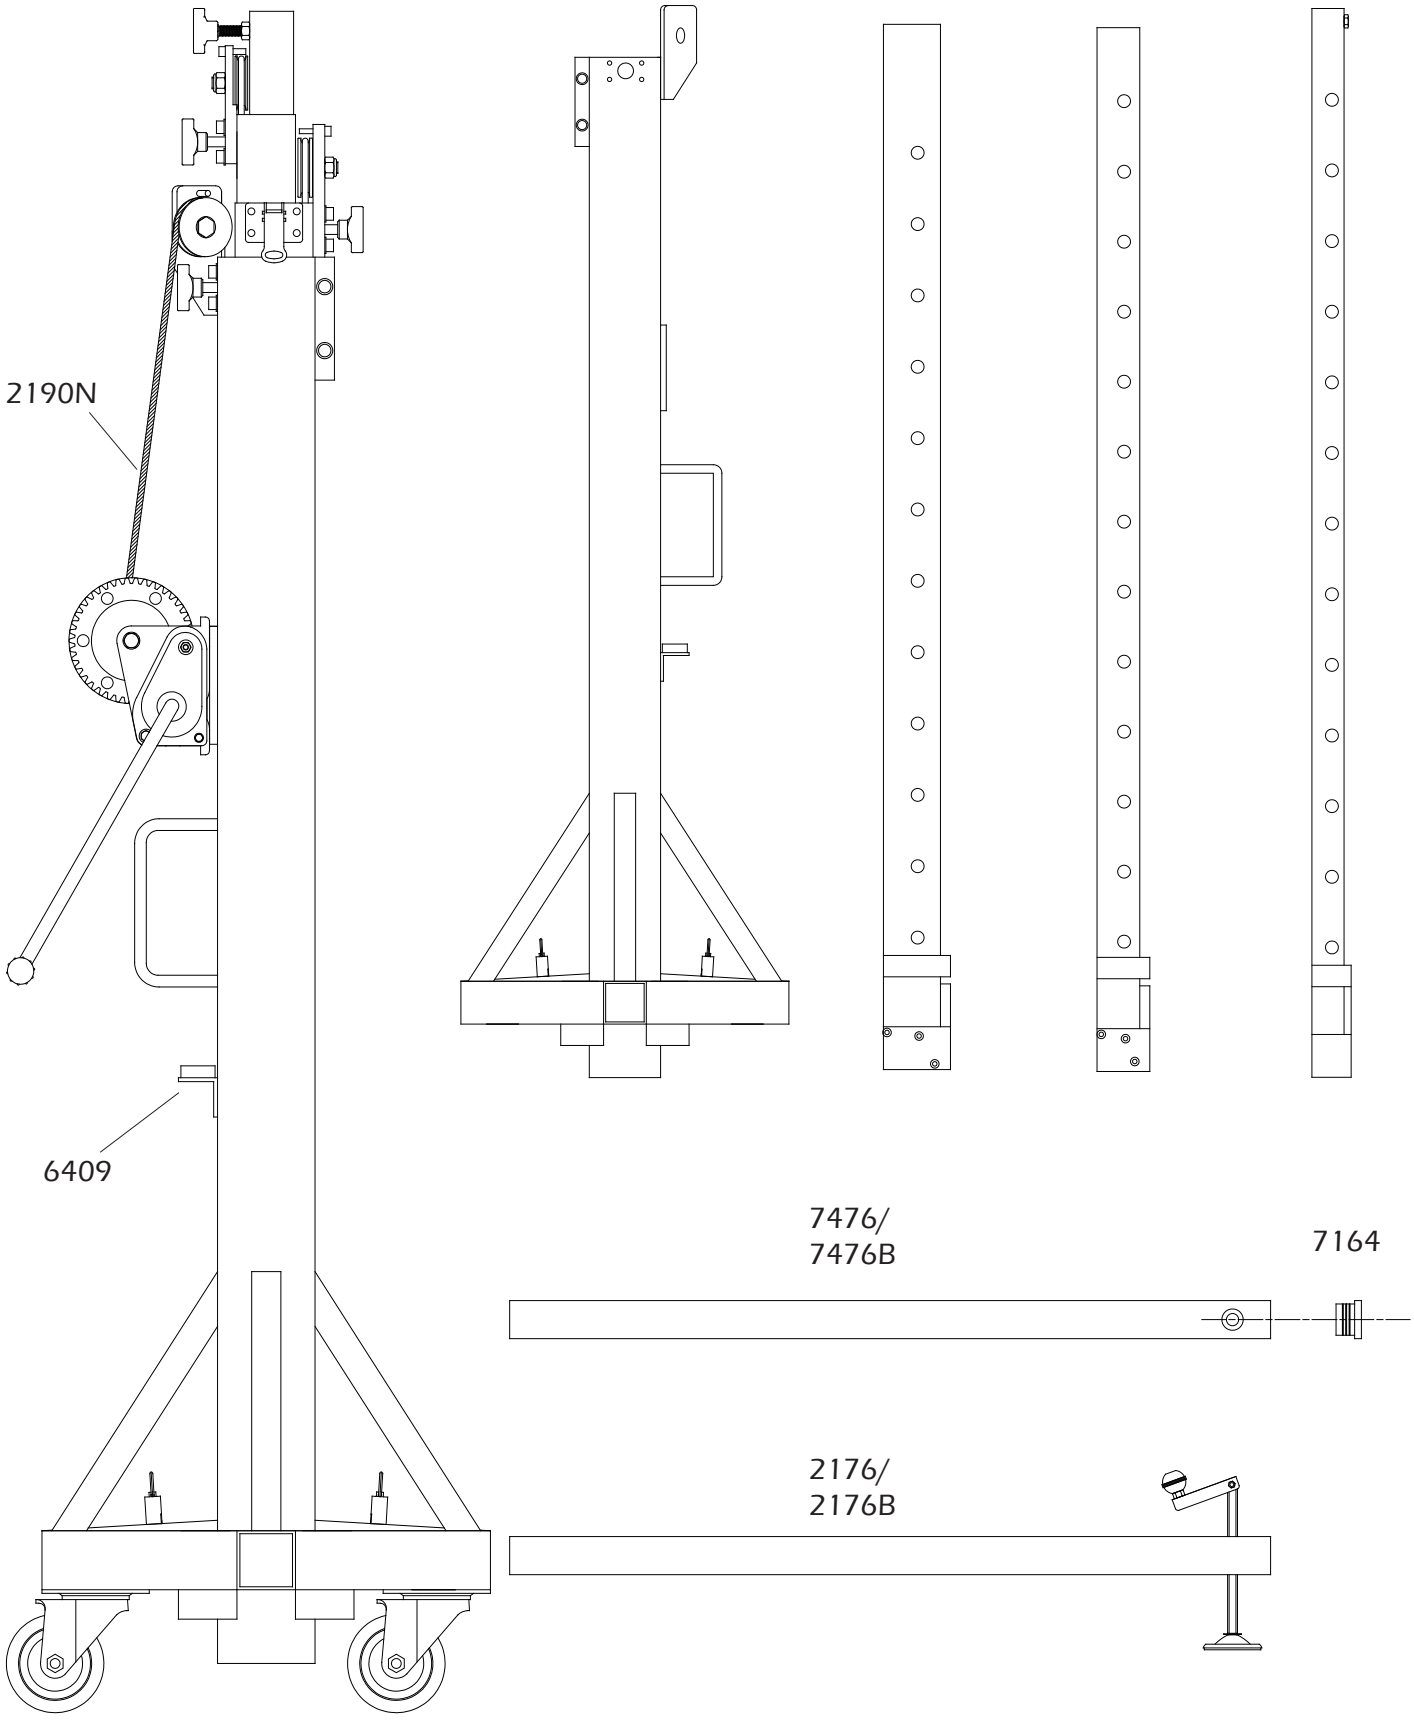

Depósito legal y copyright. Todos los derechos reservados.

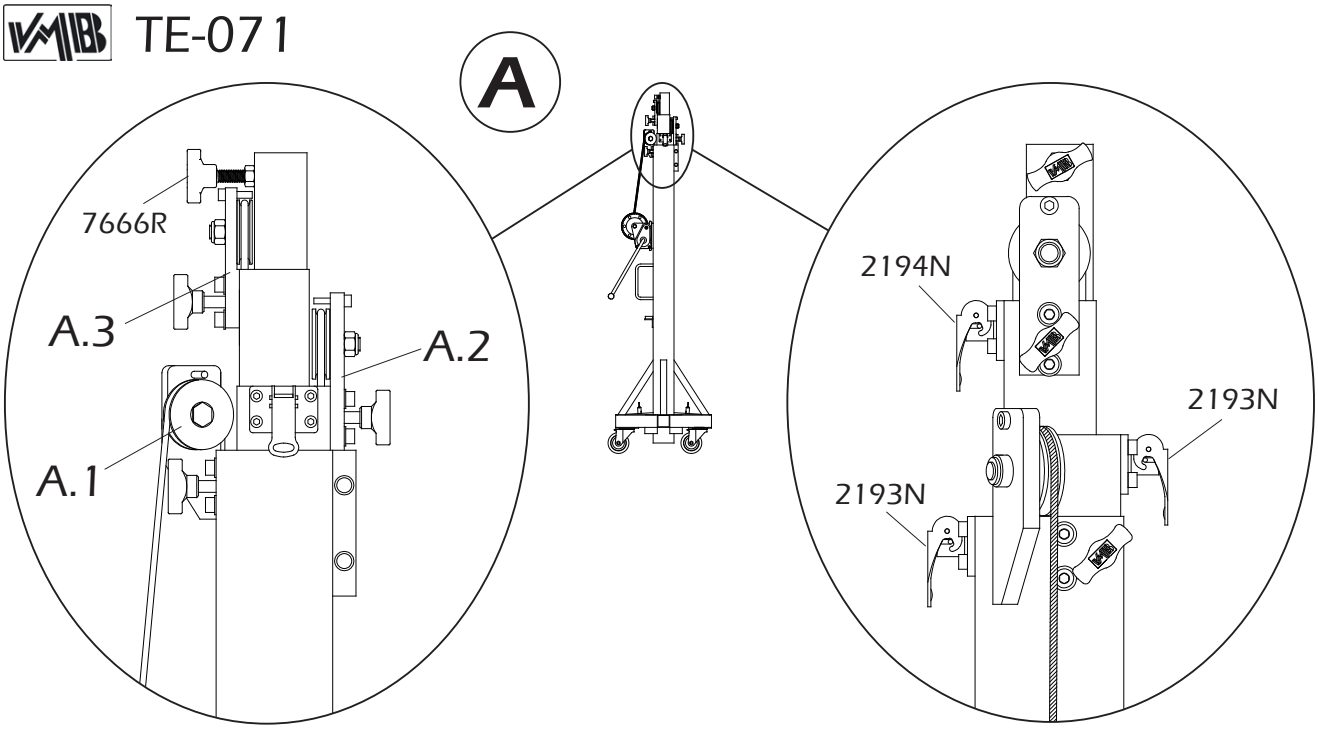


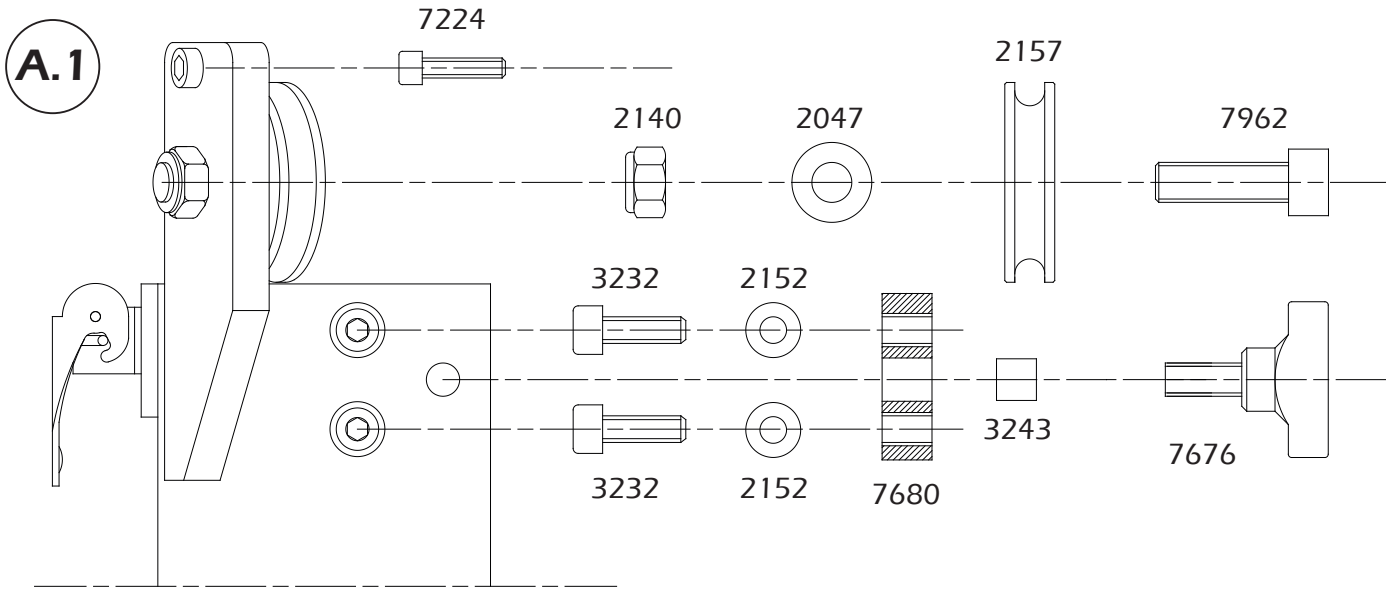


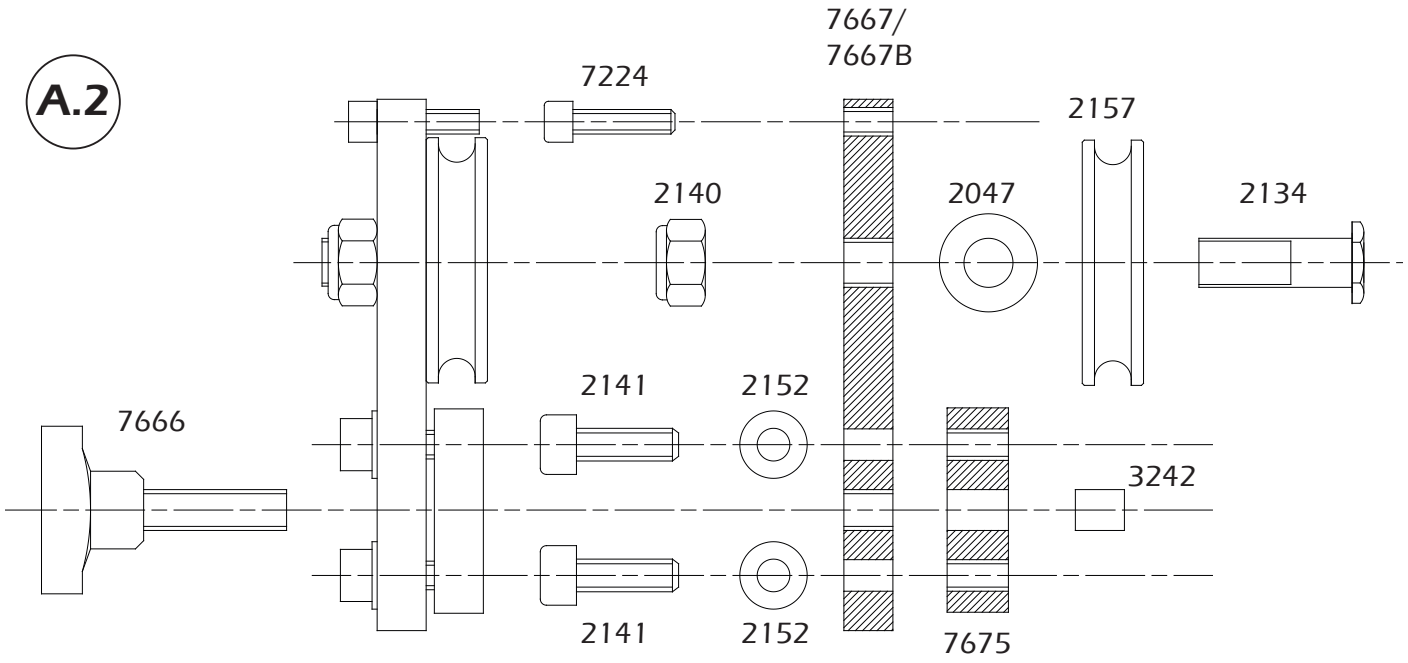


Depósito legal y copyright. Todos los derechos reservados.


A.3

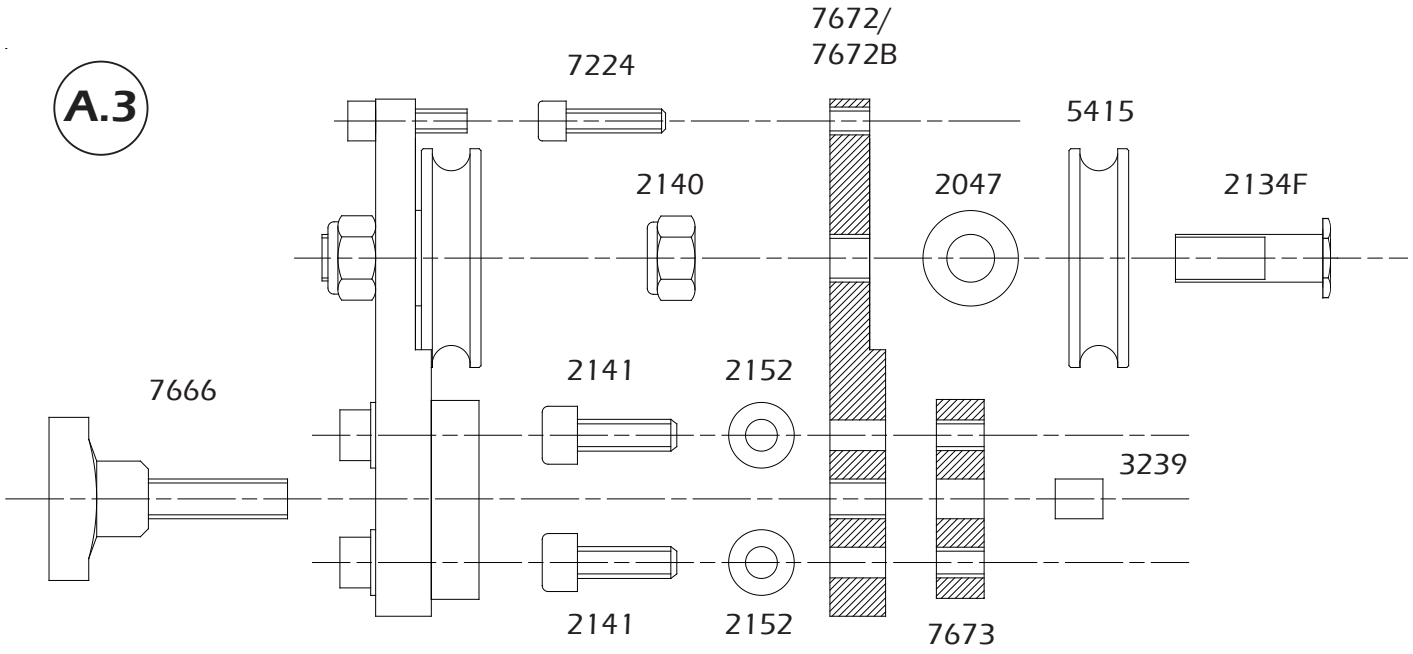

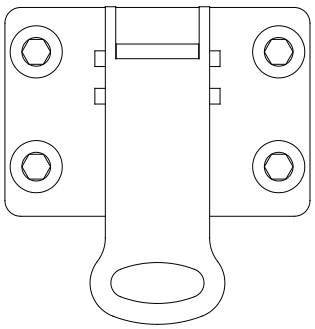


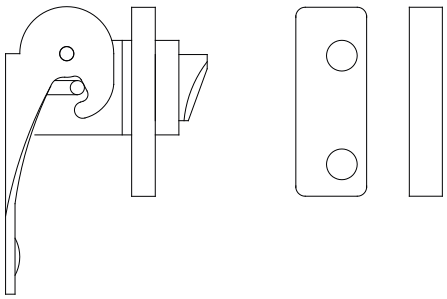


Tramo /
Profile 7101

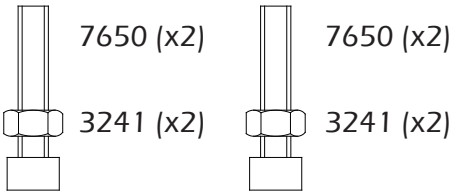


Tramo /
Profile 7102

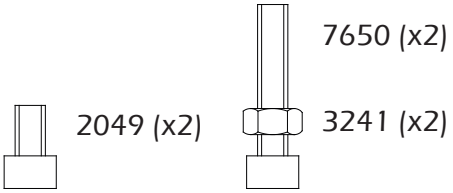


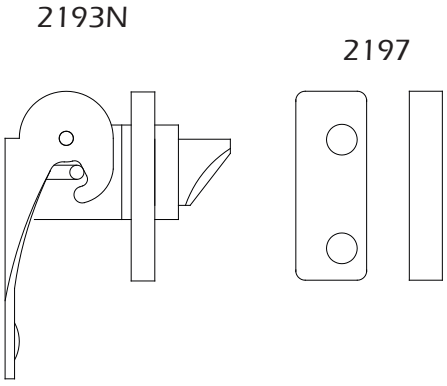


Tramo /
Profile 7103

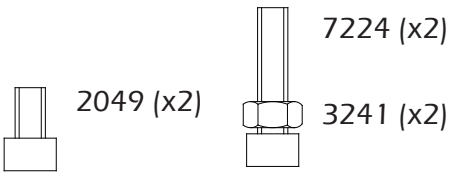


Depósito legal y copyright. Todos los derechos reservados.

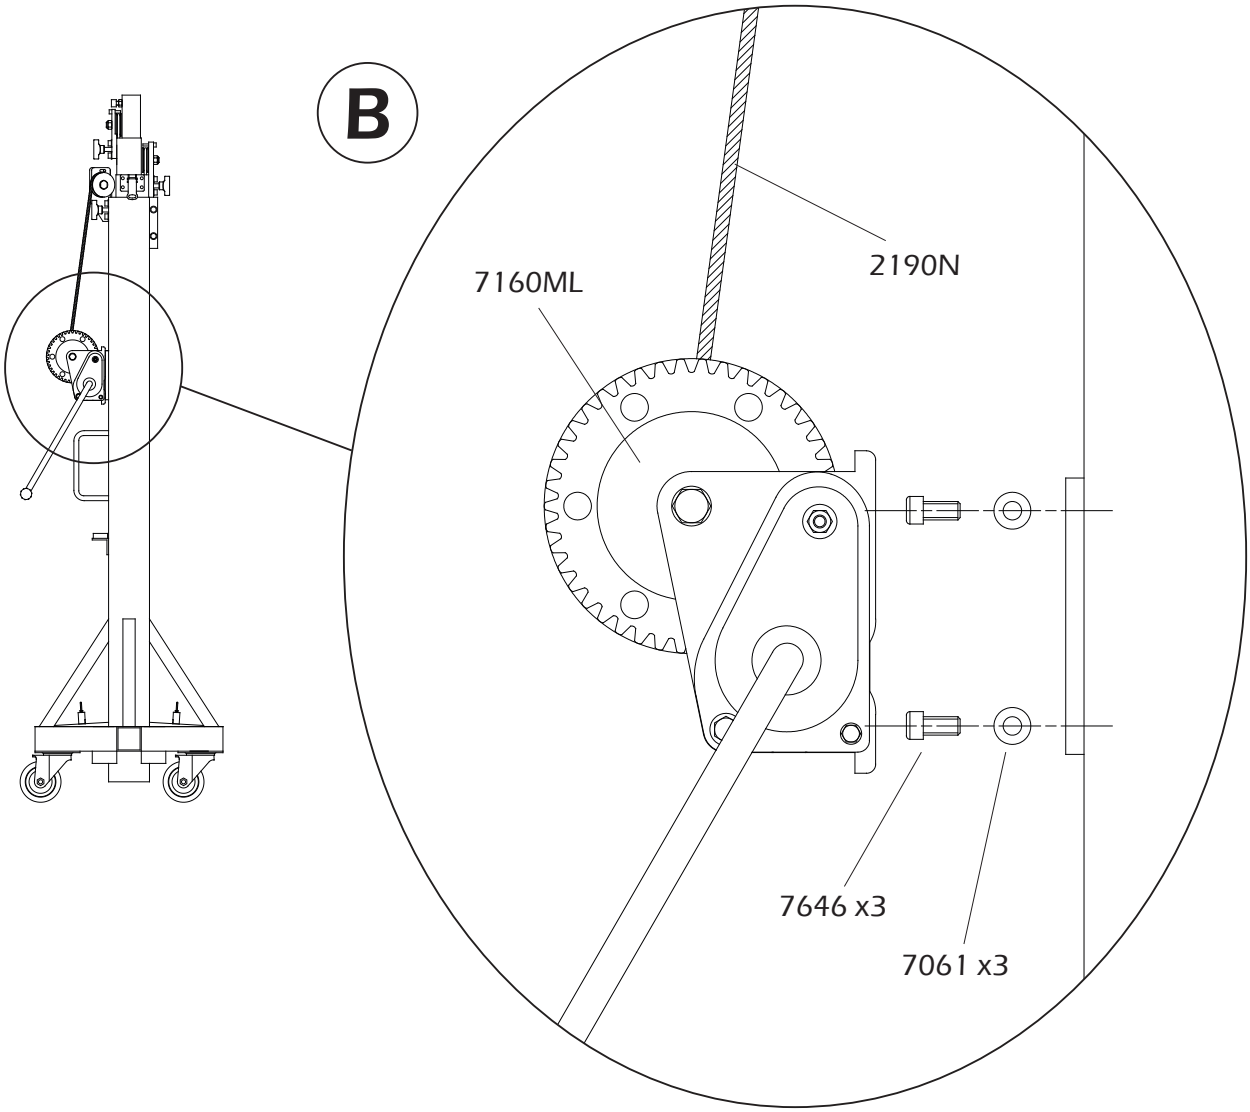

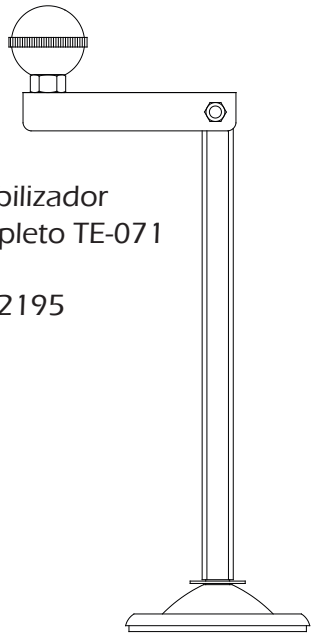



Estabilizador
completo TE-071


Ref: 2195

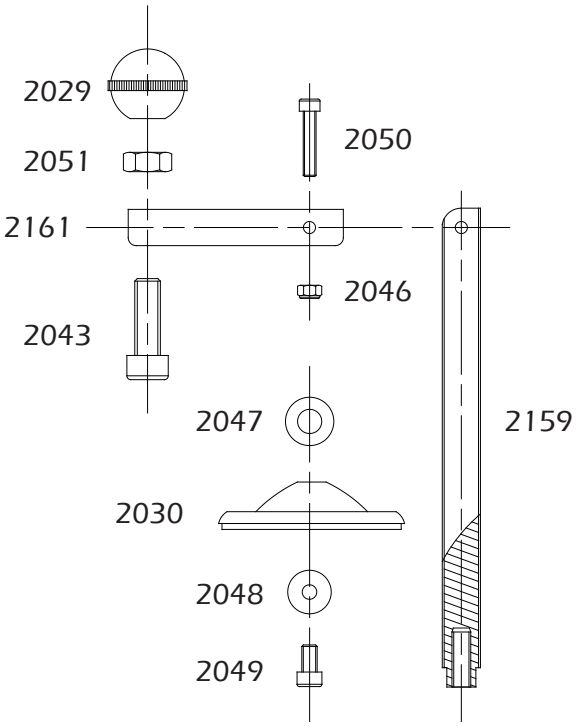

Depósito legal y copyright. Todos los derechos reservados.

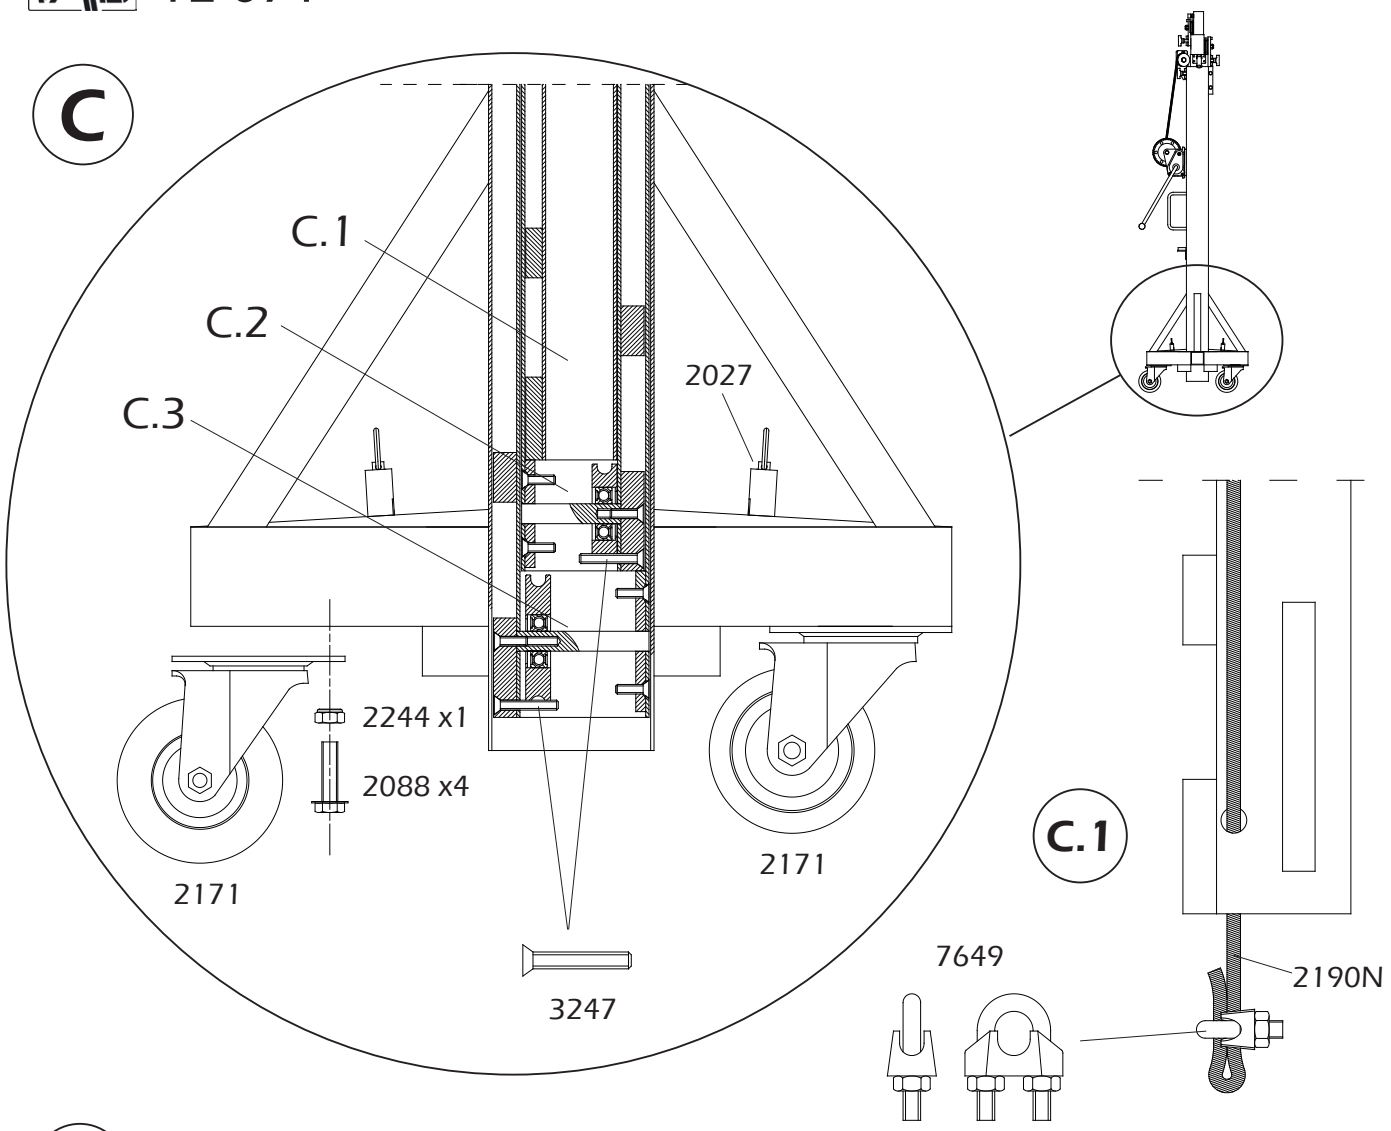

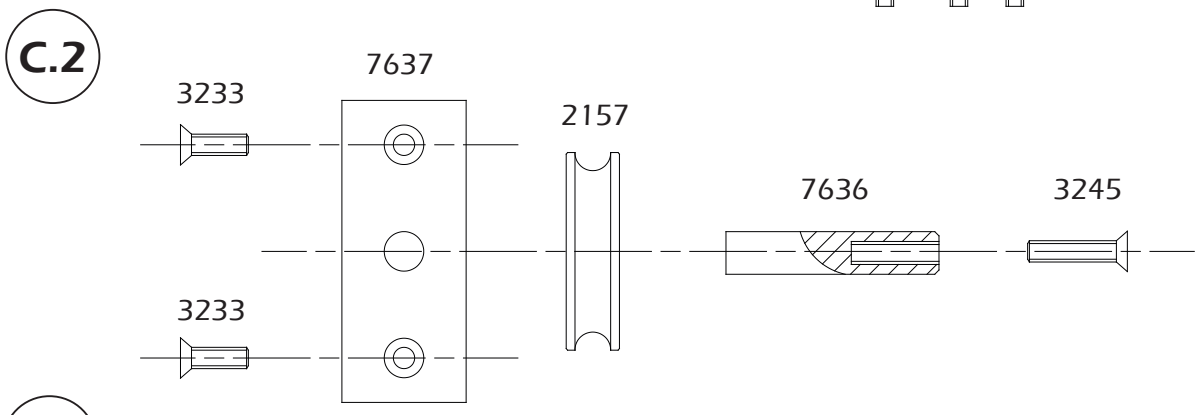

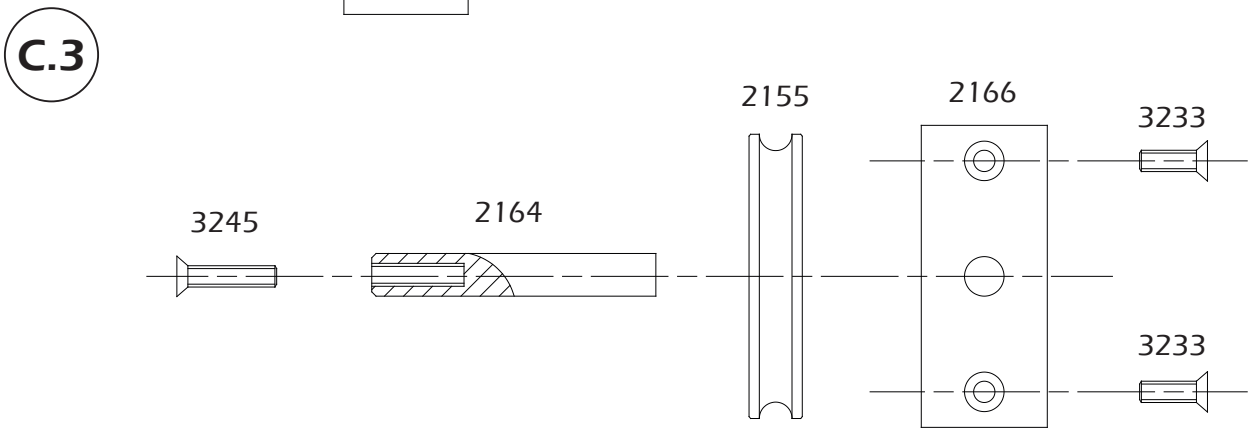

Depósito legal y copyright. Todos los derechos reservados.

SPARE PARTS LIST / LISTA DE REPUESTOS TE-071

Code	Description GB / USA	Descripción ES
2027	Legs catch	Gatillo redondo patas
2029	Crank nob Ø 34	Bola baquelita Ø34
2030	Stabilizer round plate Ø 84	Platillo de apoyo Ø84
2043	M10 Screw	Tornillo M10
2046	M5 Auto-block nut	Tuerca autoblocante M5
2047	M12 Washer	Arandela M12
2048	M6 Washer	Arandela M6
2049	M6 Allen screw	Tornillo allen M6
2050	M5 Screw	Tornillo M5
2051	M10 nut	Tuerca M10
2088	M6 Taptite screw	Tornillo taptite M6
2134	M12x38 Special head screw	Tornillo cabeza especial M12x38
2134F	M12x38 Special thin head screw	Tornillo cabeza especial fina M12x38
2140	M12 Auto-block nut	Tuerca autoblocante M12
2141	M8 Screw	Tornillo M8
2152	M8 Washer	Arandela M8
2155	Ø80x15 Steel pulley	Polea de acero Ø80x15
2157	Ø60x15 Steel pulley	Polea de acero Ø60x15
2159	M16 Screw bolt	Perno roscado M16
2161	Steel hand crank	Manivela estabilizador
2164	M12 Steel axe	Eje de acero M12
2166	Steel plate	Pletina de acero
2171	Ø100 Blue rubber wheel	Rueda goma azul Ø100 plato
2176B	Complete leg (B Black)	Pata completa (B Negro)
2190N	TE-071 Ø6x8.46m Steel cable	Cable de acero Ø6x8.46m (TE-071)
2193N	ALS Lock	Gatillo ALS
2194N	ALS Lock	Gatillo ALS
2195	Complete stabilizer kit	Estabilizador completo
2197	Sliding nylon piece	Patín deslizante ajuste ALS
2244	M6 Auto-block nut	Tuerca autoblocante M6
3232	M8x16 screw	Tornillo allen M8x16
3233	M6 Conic screw	Tornillo cónico M6
3239	Short scratch preventing nylon piece	Taco nylon corto

Depósito legal y copyright. Todos los derechos reservados.

Code	Description GB / USA	Descripción ES
3241	M6 Nut	Tuerca M6
3242	Scratch preventing nylon 12mm	Taco nylon 12mm
3243	Scratch preventing nylon 9mm	Taco nylon 9mm
3245	M6 Conic screw	Tornillo cónico M6
3247	M6 Screw	Tornillo M6
5415	Ø 55 Steel pulley	Polea de acero Ø55
6409	Spirit level	Nivel de burbuja
7061	M10 Washer	Arandela M10
7101B	TE-071 Profile 1 Base (B Black) 100	Tramo 1 Base TE-071 (B Negro) 100
7102B	TE-071 Profile 2 (B Black) 80	Tramo 2 TE-071 (B Negro) 80
7103B	TE-071 Profile 3 (B Black) 60	Tramo 3 TE-071 (B Negro) 60
7104B	TE-071 Profile 4 (B Black) 45	Tramo 4 TE-071 (B Negro) 45
7160ML	Winch 450 Kg (Long crank)	Cabestrante 450 Kg (Manivela larga)
7164	Plastic end cap	Tapón de plástico patas
7224	M6 Allen screw	Tornillo allen M6
7476B	Leg profile (B Black)	Perfil pata (B Negro)
7636	Steel axe Ø12	Eje de acero Ø12
7637	Inner steel plate	Pletina de acero interior
7646	M10 screw	Tornillo M10
7649	6 mm Cable end lock	Prisionero para cable 6 mm
7650	M6 Screw	Tornillo M6
7666	M10x35 VMB black knob	Pomo negro VMB M10x35
7666R	M10x35 VMB red knob	Pomo rojo VMB M10x35
7667B	Steel plate (B Black)	Pletina de acero (B Negro)
7672B	Steel plate (B Black)	Pletina de acero (B Negro)
7673	Inner steel plate	Pletina de acero interior
7675	Inner steel plate	Pletina de acero interior
7676	M10x20 VMB black knob	Pomo negro VMB M10x20
7680	Steel plate	Pletina acero ajuste interior
7962	M12 Allen screw	Tornillo allen M12

Depósito legal y copyright. Todos los derechos reservados.

DEKRA

Test report about an acceptance inspection

Device typ:	Towerlift	
Typ:	TE-071	
Fabrikator:	Prolifts S. L. Pol. Ind. Picassent Calle 7 E-46220 Picassent VALENZIA	
Technical specifications:	charge maximum:	220kg
	Charge minimum:	25 kg
	minimum high:	1,73 m
	maximum high:	5,35 m
	Serial Number :	059731
	Year of manufacture :	2010
Foundation :	BGV C1, BGG 912	
Test result:	The accomplishment of the towerlift complies the safty-related receivables of the BGV-C1.	
Clue: deliver.	At each towerlift is an EG-declaration of conformity to	
	Bevor the towerlift is commissioning at first is an optical control from an assessor after BGG 912 necessary.	

Sachverständiger Dipl. Ing. K. Haak d. BG ermächt. DEKRA 02-048-B2

Berlin, 16.06.2010

Dipl.-Ing. Konrad Haak

Depósito legal y copyright. Todos los derechos reservados.

facebook / vmblifts

Canal VMBLifts

For further information follow the advise of our technicians:
Para más información consulte con nuestros técnicos en:

PRO LIFTS S.L.

C/ Ciudad de Barcelona Nº19
Pol. Ind. Fuente del Jarro
46988 Paterna (Valencia) Spain
Tlf Export: +34 96 171 81 86
Tlf Nacional: 96 171 81 83

email: **info@prolifts.es** web: **www.prolifts.es**